



IBIS

ADJUSTING THE COCKPIT

The Oso ships with the display and light mounts in the small parts box. We recommend making an Oreo sandwich with the Lupine light mount acting as the filling between the Bosch Kiox Display mount and stem.



The light should be placed in front of the stem, so that the beam clears over the cables.



CABLE LOOMS

We also include a cable loom to help tidy up the cables.



We do not recommend putting the shifter dropper housing in the loom with the e-wires. If they're all together, the dropper housing tends to pull the wire grommet out of the frame.

It's best to pull the light and display wires out from the DT so they're taut and install the loom so it bottoms out on the grommet.



BATTERY CHARGE

The Oso is shipped with the battery at low charge. The battery needs to be fully charged before the bike is ridden, including preliminary test rides. If you are planning to assemble and ship the bike to a customer, do not charge the battery. Ebikes must be shipped with the battery at low charge.



DOOR RELEASE

To open the battery door, use a 6mm Allen key to turn the bolt counterclockwise one quarter turn. To replace the door, turn the bolt clockwise one turn. The latch should turn easily. It should not require any force to unlatch the door.



SERVICE SERIES

For detailed instructions, we have a full series of service videos available, click the play buttons below.

