
## **BOTTOM BRACKET GUIDE**

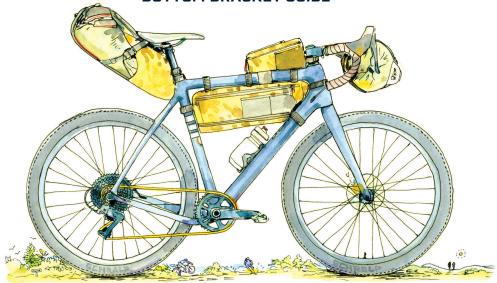

### WHAT BOTTOM BRACKET DO I GET FOR MY NEW HAKKA MX?

#### SHIMANO ROAD CRANKS:

External 24mm Bottom Brackets

BRAND	PART NUMBER(S)
Chris King	Threadfit T47 24X & Fit Kit #4
Enduro Bearings	BKC-0741, BKS-0231
Praxis Works	47-3001
White Industries	BBE24T47

# BB30 ROAD CRANKS: Internal 30mm Bottom Brackets (Including SRAM cranks listed as BB30/PF30 compatible)

BRAND	PART NUMBER(S)
Chris King	Part Threadfit T47 301 (no Fit Kit needed)
Enduro Bearings	BKC-0721, BKS-0201
White Industries	BBI306873T47

# BB386EVO ROAD CRANKS: External 30mm Bottom Brackets (Including SRAM cranks listed as BB30/386 compatible)

BRAND	PART NUMBER(S)
Chris King	Part Threadfit T47 30I (no Fit Kit, use normal spacers)
Enduro Bearings	BKC-0731, BKS-0211
White Industries	BBE30T47 (not FSA cranks)

**DR**, use 30mm Internal BBs listed above and use FSA adapter 200-3204 (BB386EVO cranks to BB30/PF30 BB). QBP part CR8502.

#### **SRAM DUB ROAD CRANKS**

BRAND	PART NUMBER(S)
Chris King	Threadfit T47 30X BB & Fit Kit #1 DUB A
Wheels Manufacturing	Part T47 Outboard ABEC-3 BB for 29mm SRAM DUB compatible cranks

#### **SRAM GXP 24/22MM STEPPED CRANKS:**

External 24/22mm Bottom Brackets

BRAND	PART NUMBER(S)
Chris King	Threadfit T47 24X & Fit Kit #6
Enduro Bearings	BKC-0741, BKS-0231
White Industries	BBE22T47

### **EASTON OR ROTOR 30MM ROAD CRANKS:**

External 30mm Bottom Brackets

BRAND	PART NUMBER(S)	
Chris King	Threadfit T47 30X & Fit Kit #5	
Enduro Bearings	BKC-0731, BKS-0211	
White Industries	BBE30T47	

## CAMPAGNOLO ULTRA-TORQUE CRANKS

BRAND	PART NUMBER(S)
Enduro Bearings	BB Cup Set T47 UT Ad

#### PRAXIS M30 CRANKS:

Praxis Works Bottom Brackets Only

BRAND	PART NUMBER(S)
Praxis Works	47-0000