

OSO

DOWNHILL BOTH WAYS

ADHESIVE GUARDS INSTALLATION GUIDE



IBIS

CLEAN AND DRY THE AREA

Use a clean, soft cloth and isopropyl alcohol to clean the area where the decal will be applied. Allow to dry completely before applying the decal.

APPLY THE CORNER OF THE EXPOSED DECAL TO THE FRAME

- Keep the decal pulled tight as you press it into the vehicle to prevent bubbling from occurring. You may use a low tack tape to help place the sticker and aid in alignment.
- Using a straight edged tool helps ensure you apply pressure over the entire decal, which will force out small bubbles.

UNPEEL THE BACKING AS YOU GO

As you apply more of the decal to the frame, peel more of the backing off to reveal more of the decal. Peel the

backing off a few inches at a time to ensure you can keep the decal straight as you apply it without worrying about other parts sticking.

- Continue to apply the decal to the frame while peeling back more of the backing as you progress.


PEEL THE TRANSFER TAPE OFF

After thirty minutes or so, peel the transfer tape off starting at one corner. Peel the tape back slowly while watching for any areas the decal may peel back with the transfer tape. If the decal begins to peel off with the tape, press the tape and decal back into place firmly, and begin peeling the tape away again from another angle.


- Be careful not to tear the decal while removing the transfer tape.
- Slow, steady movements are the best way to prevent damage to the decal.

FRAME GUARDS AND PART NUMBERS


PN# 10-001
Cable Rub

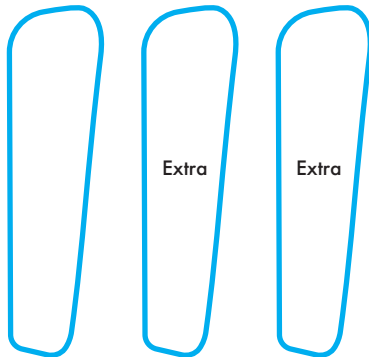

PN# 10-003
Bottom Battery Door
[Fits All Sizes]

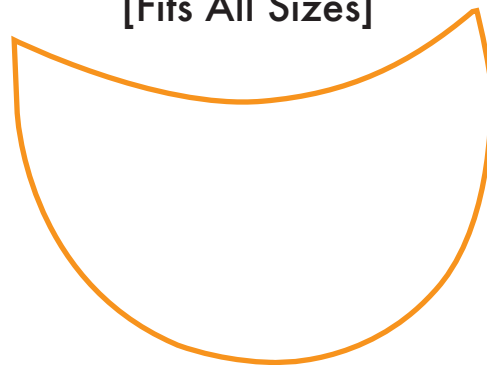


PN# 10-003
Top Battery Door
[Fits All Sizes]

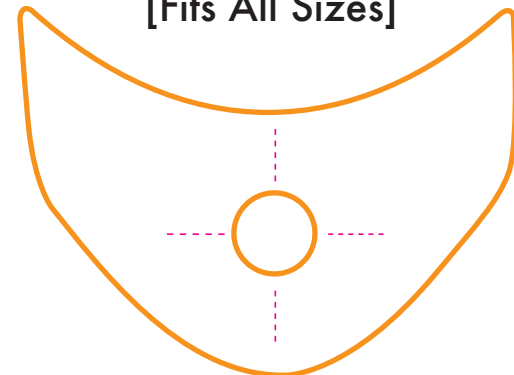

PN# 10-008
Rear Triangle / Drive Side Interior Chain Guard
[Fits All Sizes]



PN# 10-005
Rear Triangle / Interior Yoke
[Fits All Sizes]

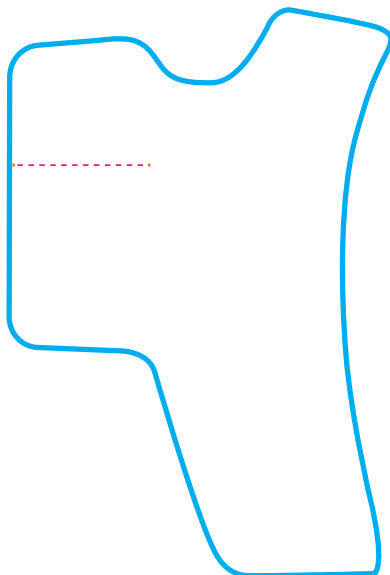

PN# 10-006
Rear Triangle Tire Guard
Non-Drive Side Interior Swing Arm
[Fits All Sizes]




PN# 10-007
Rear Triangle Tire Guard
Drive Side Interior Swing Arm
[Fits All Sizes]



FRONT TRIANGLE

HEAD TUBE CABLE RUB GUARD PN# 10-001 [Fits All Sizes]

- Clean the frame.
- Align top edge of sticker to edge of head tube. Tapered side goes toward the right side of frame, front should not cross the center of the head tube.
- Secure one side of the head tube cable rub guard with low-tac tape.
- Secure the middle so the film does not move.
- Peel away the the opposite edge of film and expose approximately 1cm/0.5" of film. Apply film to and work towards the opposite direction per adhesive mounting instructions.

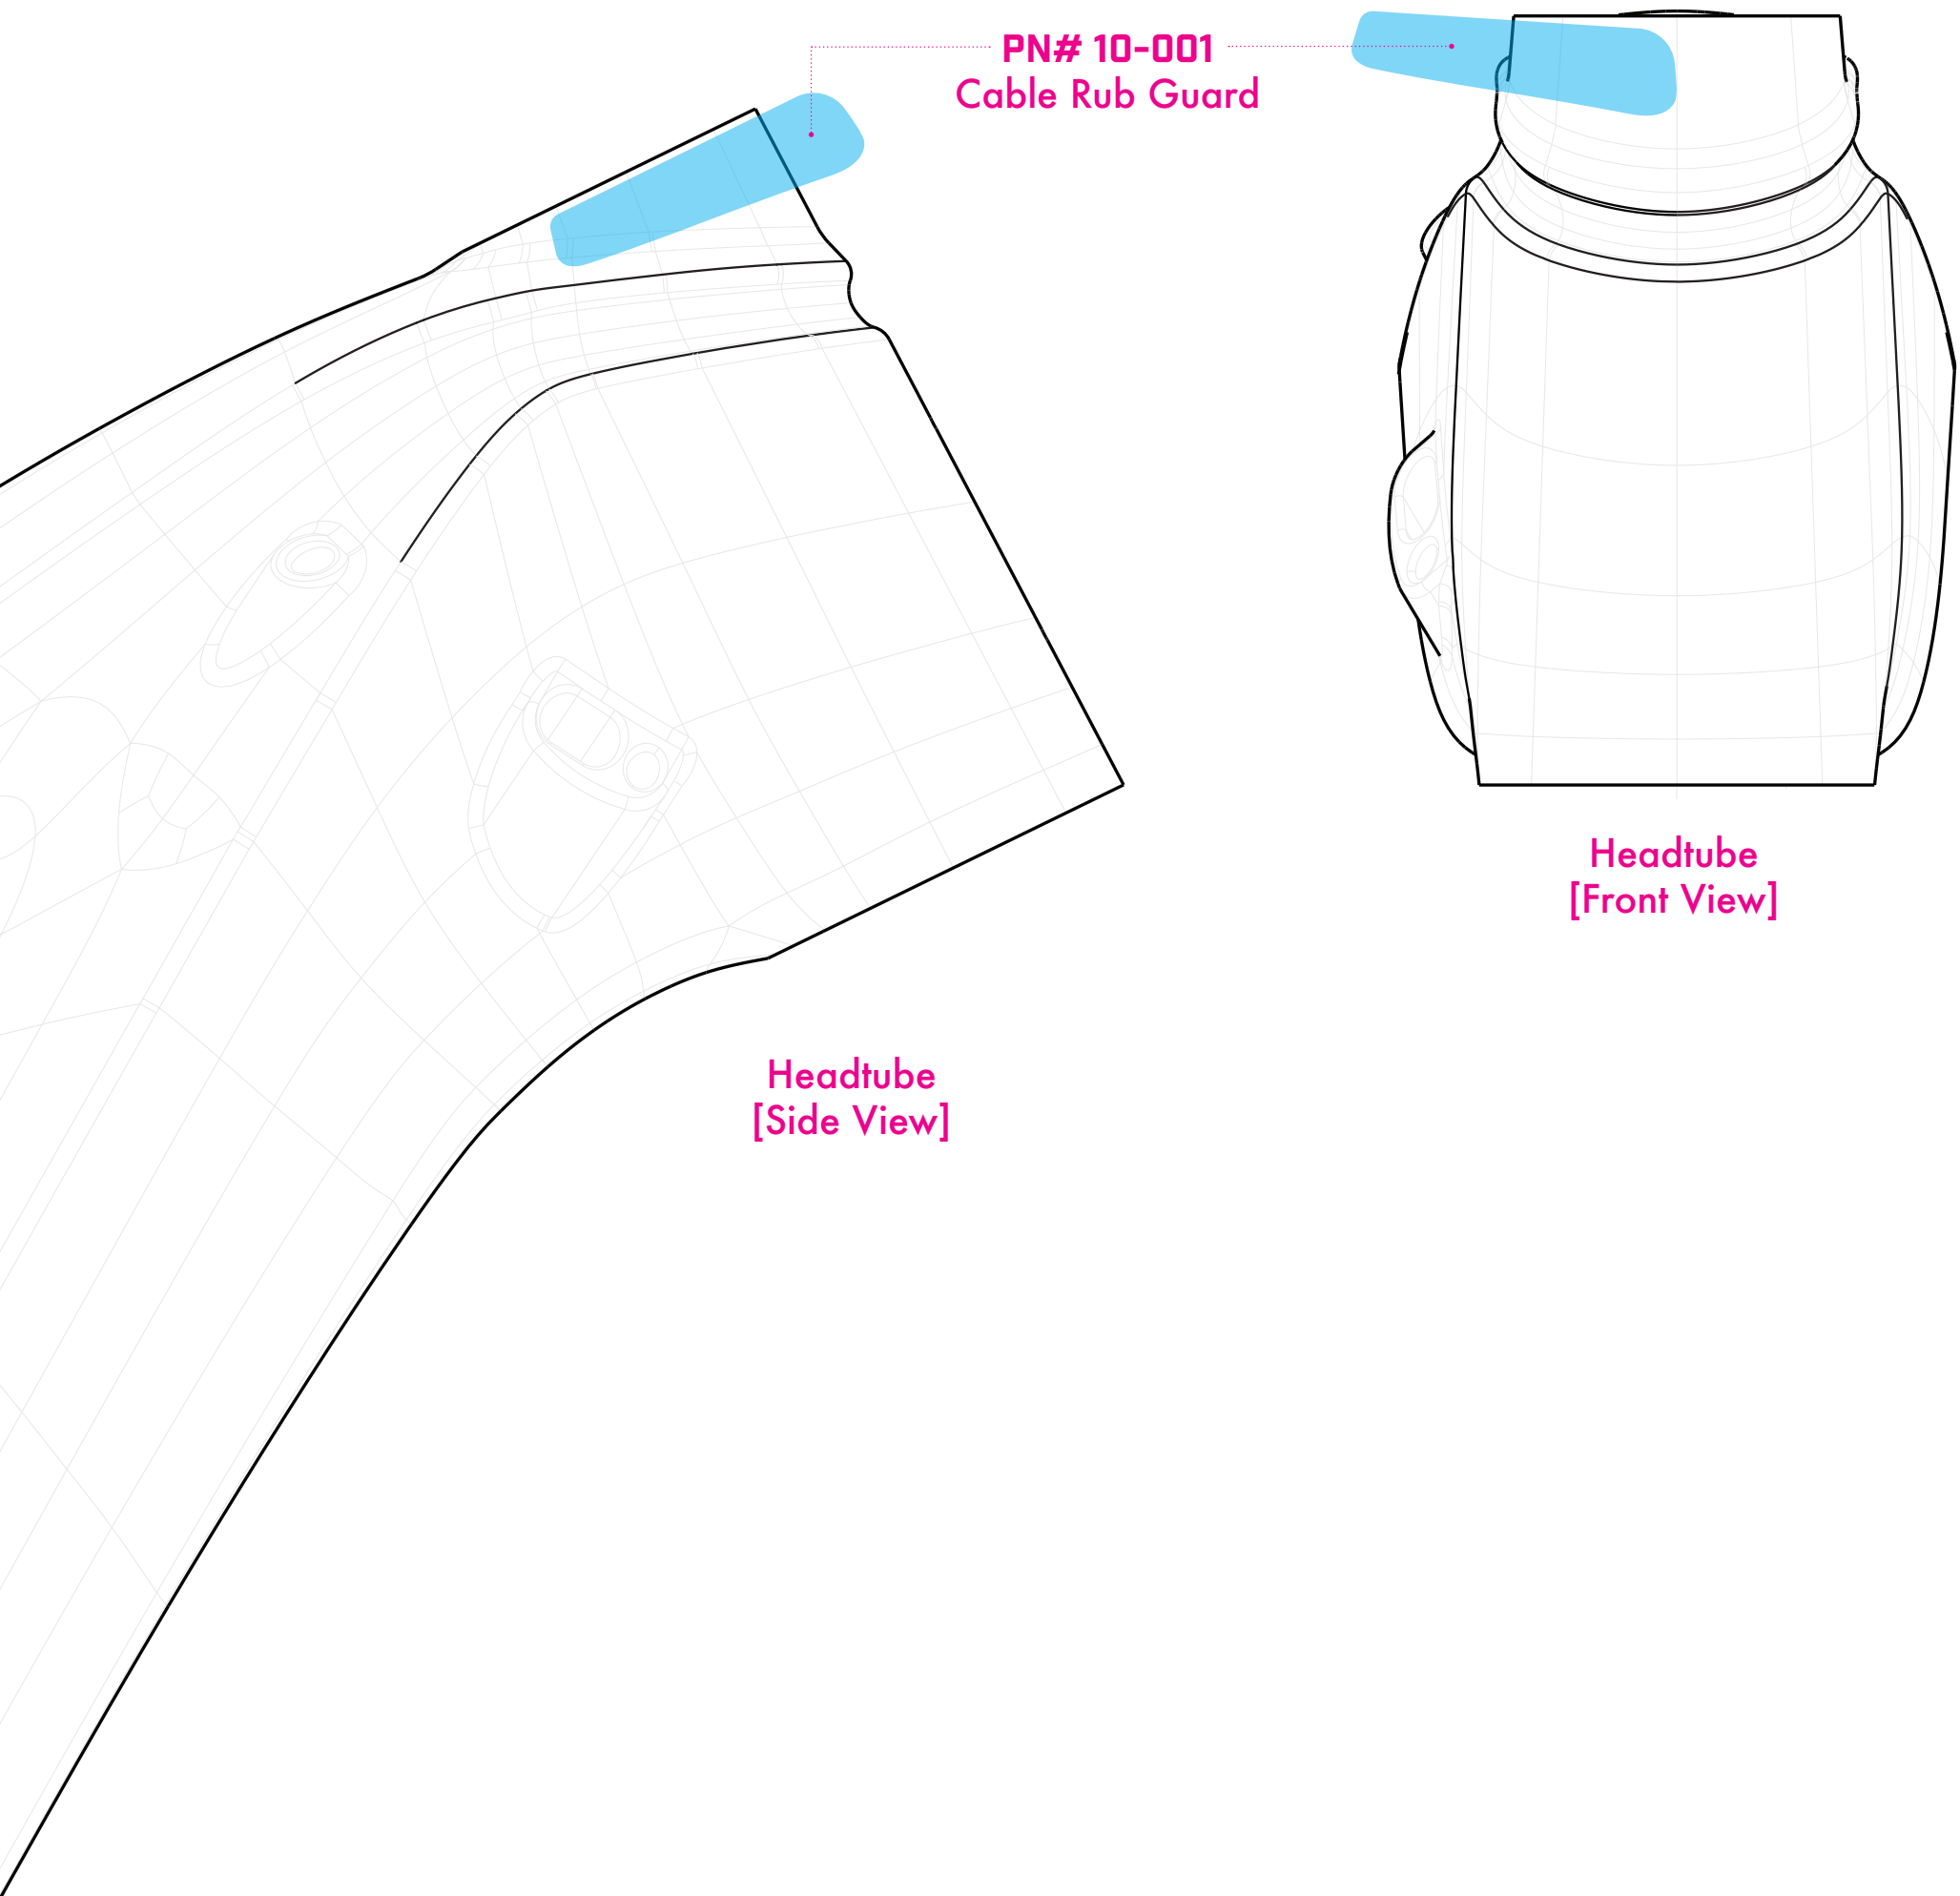


27.5 & 29" SWING ARM

REAR TRIANGLE TIRE GUARD NON DRIVE SIDE PN# 10-006




REAR TRIANGLE TIRE GUARD DRIVE SIDE PN# 10-007

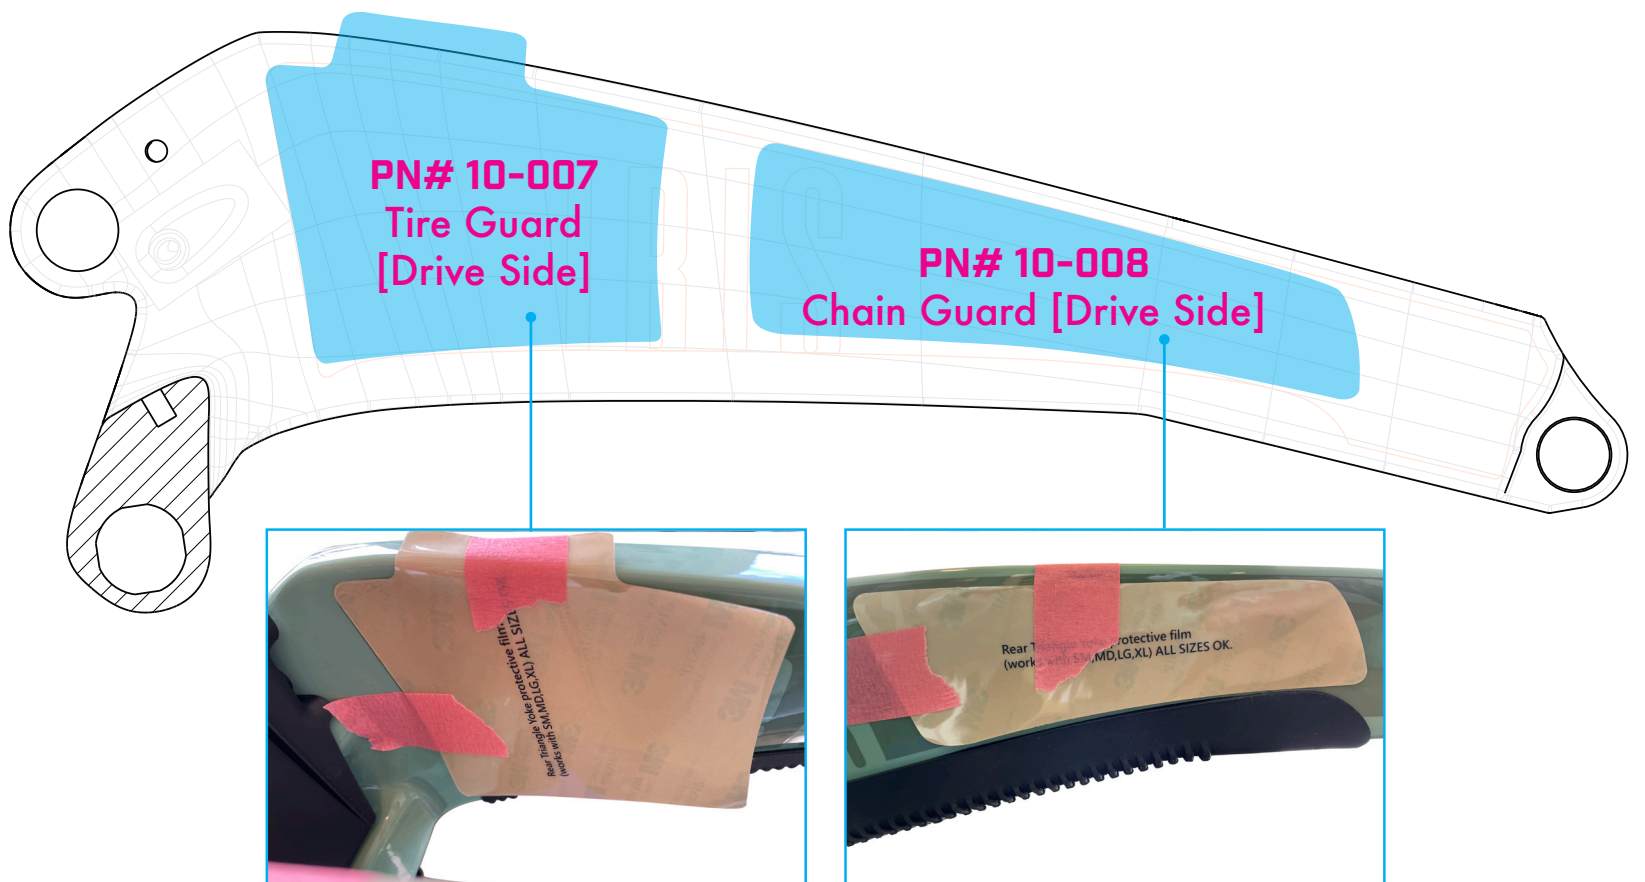

REAR TRIANGLE CHAIN GUARD DRIVE SIDE PN# 10-008

REAR TRIANGLE YOKE TIRE GUARD PN# 10-005

- Clean the Yoke area.
- Center the guard and make sure the bottom is horizontal to the thru hole.
- Use low-tac tape to secure one side and center.
- Peel away the opposite edge of film and expose approximately 1cm/.5" of film.
- Press film down carefully without any air gap and work toward the secured side.
- Remove instructional top film when done.

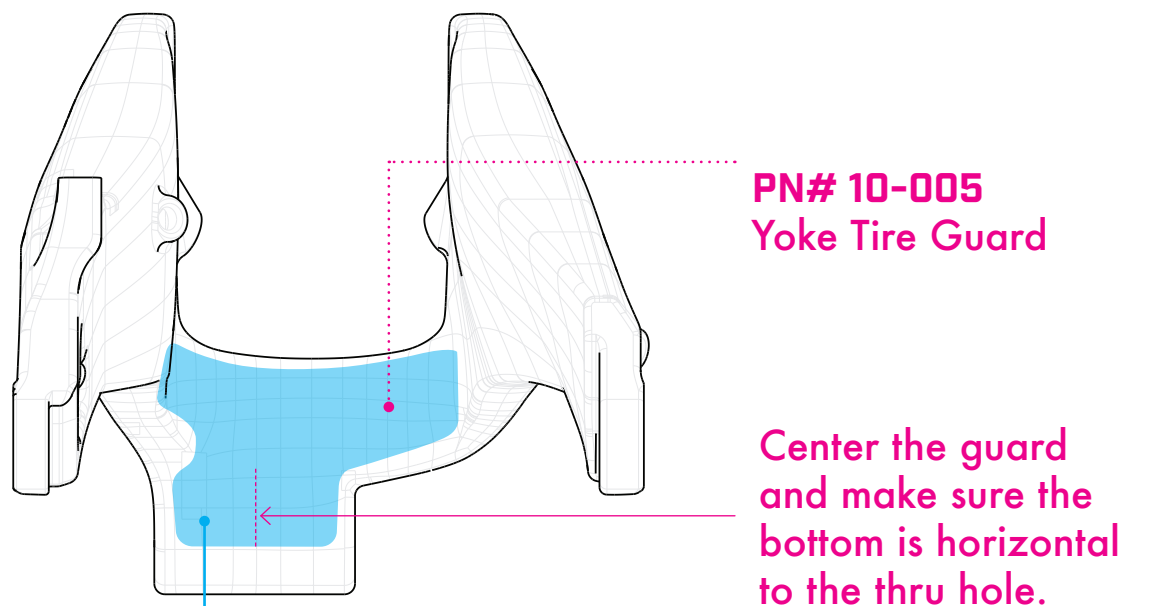

BATTERY DOOR



BATTERY COVER GUARD : TOP PN# 10-002 [Fits All Sizes]


BATTERY COVER GUARD : BOTTOM PN# 10-003 [Fits All Sizes]

- Clean the area.
- For the top of the battery cover, center the guard to the opening hole.
- Use low-tac tape to secure one side and center.
- Peel away the opposite edge of film and expose approximately 1cm/.5" of film.
- Press film down carefully without any air gap and work toward the secured side.
- Remove instructional top film when done.



MEDIUM
LARGE
X-LARGE

SMALL

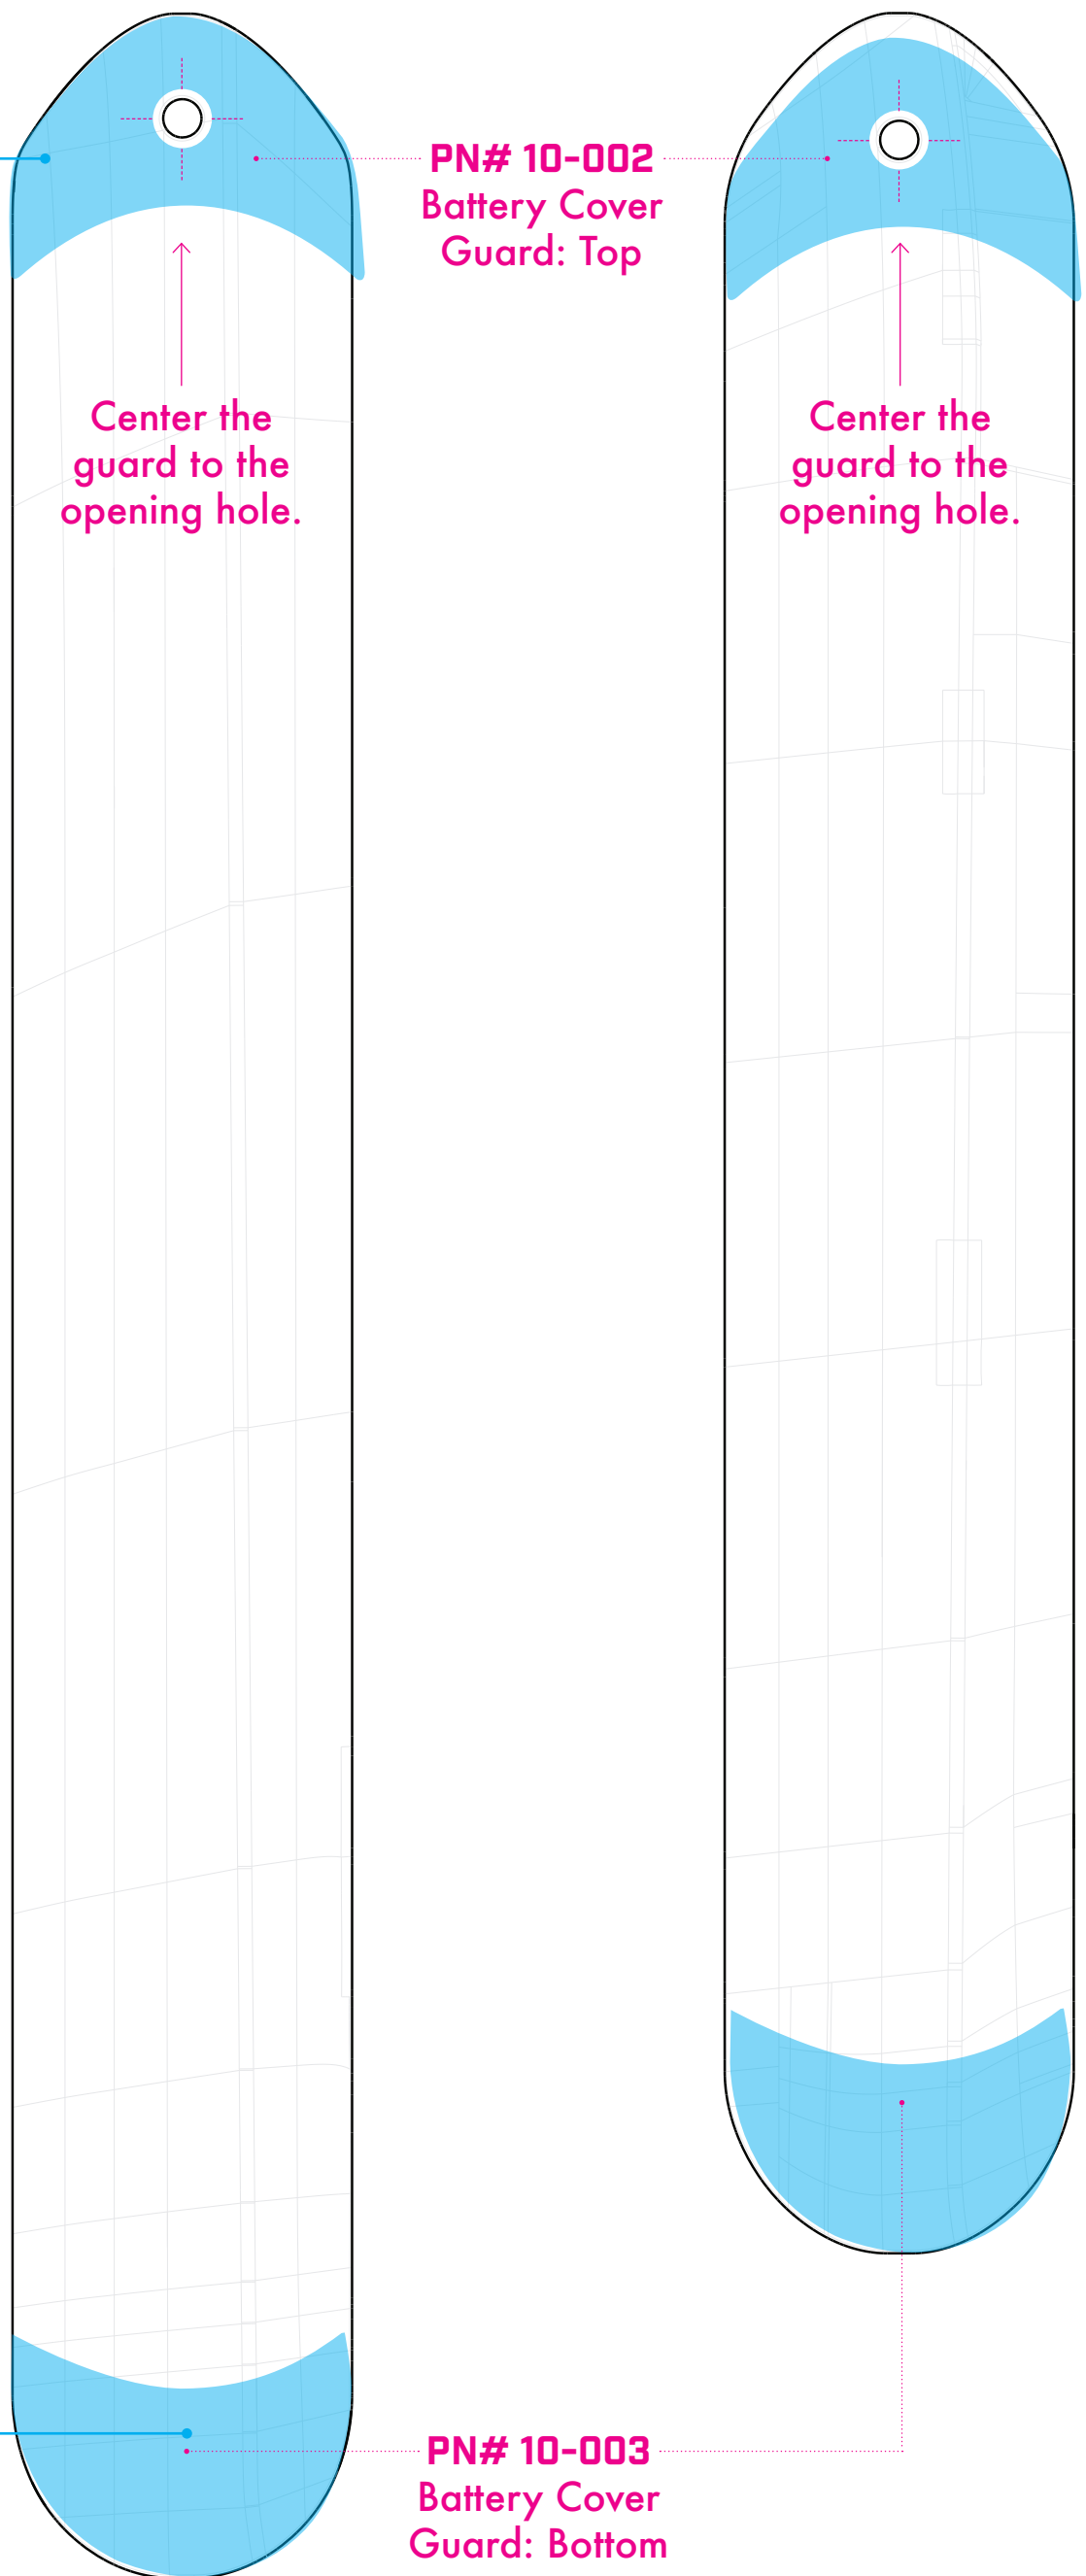

QUESTIONS?
askchuck@ibiscycles.com

