


SET FORK SAG

- Reference the suspension setup guide, install the appropriate spring for your rider weight. The Marzocchi Bomber Z1 Coil on the Ripmo AF ships with medium (blue) spring installed across all sizes.

SET FORK DAMPING

- Turn your rebound knob clockwise to the closed position, the last click. Then back them out to the number of clicks shown in the table below.
- These are just suggestions, so experiment until you find the settings that work for you.

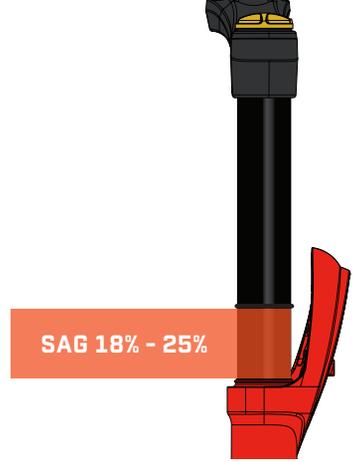

MARZOCCHI BOMBER Z1 : 29 | COIL GUIDE

RIDER WEIGHT (with gear)

LBS	KG	SPRING	PART NUMBER	REBOUND	PRELOAD	COMPRESSION
120-150	54-68	PURPLE	820-03-656-KIT	13-11	1-2	None
150-180	68-82	BLUE	820-03-657-KIT	10-8	1-2	1/6th OF DIALS RANGE
180-210	82-95	GREEN	820-03-658-KIT	7-5	2-4	1/4th OF DIALS RANGE
210-250	95-113	YELLOW	820-03-659-KIT	4-1	2-4	1/3rd OF DIALS RANGE

Check out this video for instructions on how to swap the forks spring.

